



Network License Quick Start

Network Installation

To use the Network License (red NetR4ND USB key) either run the License Manager application or install the License Service (note that only one must be used at any time otherwise problems will occur).

Each workstation will also need to configure the remote IP address pointing to the computer running the Licensing software. This computer should have a static IP.

The License Tools contains all the tools required to manage the network licensing.

License Manager or License Service?

The License Manager runs as a simple application and has an easy interface, but requires the computer to be logged in at all times to operate. Logging out will stop the License Manager.

The License Service runs in the background and has no visible interface and will continue to run in the background when logged out. It is more suitable for a Server computer.


The License Monitor application can be used anywhere within the network to monitor the licenses for the service or the manager by configuring the remote IP address of the computer running the Licensing software.

License Manager Installation

To use the Manager, start the application by double clicking the License Manager icon from the desktop or program group. For convenience, a shortcut can be placed in the Startup folder.

License Service Installation

To use the Service run the License Tools application from the program group. A grey Structural Toolkit icon will appear in the Tool Tray. Right mouse click on the Structural Toolkit icon, and select Install Service. Ensure the network lock is plugged into the computer/server before installing the service.

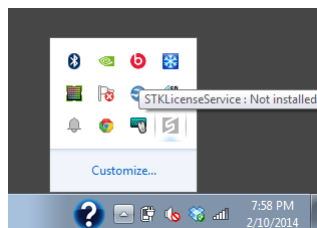

After the service installs, the icon will change colour to bright orange. Select the Show Event Log from the right mouse click context menu to ensure that everything is running correctly.

Refer to the individual installation manuals for additional information.